

USE AND MAINTENANCE



 **be safe SG ---**



Portable Single-Gas Detector

INDICE

1.0	IMPORTANT INFORMATION	5
1.1	About this manual	5
1.2	Safety Warnings	5
1.3	Disposal	5
1.4	Warranty	5
1.5	Manufacturer's address	5
2.0	SAFETY	6
2.1	Safety check	6
2.2	Permitted use of the product	6
2.3	Unauthorized use of the product	6
3.0	OVERVIEW	6
4.0	TECHNICAL FEATURES	7
4.1	Dimensions	7
5.0	MEASUREMENT RANGES AND SENSOR ACCURACY	7
6.0	HARDWARE DESCRIPTION	8
7.0	PRODUCT ACTIVATION	8
8.0	DISPLAY LCD	9
9.0	OPERATION	10
9.1	User's Guide	10
9.2	Self-test	10
9.3	Display main configurations (alarm - user ID)	11
9.4	Peak value display	11
9.5	Display BUMP TEST EXECUTION	11
9.6	Display CALIBRATION EXECUTION	11
10.0	GAS ALARM SIGNAL	12
10.1	LOW alarm status (LOW ALARM)	12
10.2	HIGH alarm status (HIGH ALARM)	12
11.0	STOP DETECTOR ALARM	12
11.1	ALARM remaining life under 8 hours	12
11.2	ALARM low battery	12
11.3	Self-test failed	12
12.0	EVENTS LOG	13
13.0	BUMP TEST AND CALIBRATION	13
13.1	Tools and necessary equipment	13
13.2	Wiring diagram	14
13.3	Performing the Bump Test	14
13.4	Performing the calibration of "be safe SG O2"	15
14.0	FAULTS	16
15.0	MAINTENANCE	16
15.1	Repair	16
15.2	Cleaning	16
APPENDIX A - be safe SG IR-Link & be safe SG IR-Link manager		17
Overview		17
Technical features		17
Software installation instructions		18
Connect be safe SG		18
Further information		19
Language configuration		21
Features		21
Read device information and settings		21
Change device settings		21
Save event log		21
Sensor calibration		21
Firmware Update		22
Troubleshooting		23

1.0 IMPORTANT INFORMATION

1.1 About this manual

- ◊ This manual describes the features, operation, and maintenance of **be safe SG**.
- ◊ Read this manual before using the device. The operator must be familiar with the manual and follow its directions carefully.
- ◊ This manual is subject to change as a result of technical improvements-the manufacturer assumes no responsibility for any content or printing errors.



Respect your environment, think before you print the full manual.

1.2 Safety Warnings



WARNING!

The **be safe SG** gas detectors are personal safety devices designed to detect the presence of specific gases:

be safe SG H2S	Hydrogen sulfide (H2S)
be safe SG CO	Carbon monoxide (CO)
be safe SG SO2	Sulfur dioxide (SO2)
be safe SG O2	Oxygen (O2).

For safety reasons, users must be properly trained in using the equipment and appropriate actions in case of alarm.

All persons who have or will have responsibility for operating or servicing the device must read and understand the contents of the User's Manual before operating. Failure to do so may result in serious injury or death.

1.3 Disposal

WARNING! Proper disposal

be safe SG contains a lithium battery; arrange for proper disposal only through the appropriate containers. **be safe SG** should not be disposed of as municipal waste. The complete Waste Electrical and Electronic Equipment (WEEE) management document can be found at: www.seitron.com/legals



1.4 Warranty


The user is guaranteed against product conformity defects according to the European Directive 2019/771 as well as the Seitron warranty conditions document, which can be found at www.seitron.com. The user is invited to visit our website to consult the most up-to-date version of technical documentation, manuals and catalogs.

1.5 Manufacturer's address

In case of need, the manufacturer can be contacted at the following references:

Seitron S.p.A. a socio unico
Via del Commercio, 9/11 - 36065 Mussolente (VI)
Tel. +39.0424.567842 - www.seitron.com - Email: info@seitron.it

 customer.care@seitron.it

 +39 329 1444390

2.0 SAFETY

2.1 Safety check

- Use the equipment within the scope of what is described in the “Permitted Use of the Product” chapter.
- When using the equipment, follow the ATEX safety instructions given in the product’s quick guide.
- Do not use the equipment if it appears damaged; inspect it before each use.
- For maintenance of **be safe SG**, strictly follow what is described in this manual in the “Maintenance” chapter.
- All work not specified in this manual may only be performed by Seitron service centers. Otherwise Seitron accepts no responsibility for the normal operation of **be safe SG**.

2.2 Permitted use of the product

This chapter describes the normal operating conditions of **be safe SG**:

- **be safe SG** is designed and certified with intrinsic safety.
- This product is classified for use in hazardous atmospheres with an O₂ content of no more than 21%.
- Temperature range, with relative humidity range 5% ... 95% non-condensing:

be safe SG H ₂ S / be safe SG CO / be safe SG SO ₂	- 40 .. 60 °C (- 40 .. 140 °F)
be safe SG O ₂	- 30 .. 60 °C (- 22 .. 140 °F)

2.3 Unauthorized use of the product

The use of **be safe SG** under operating conditions other than those mentioned in Section 2.2 “Permitted Use of the Product” is at the operator’s own risk and the manufacturer assumes no responsibility for the loss, damage, or costs that may result.



WARNING!
THE FOLLOWING PRODUCT VERSIONS (“NC”) ARE NOT CERTIFIED FOR USE IN HAZARDOUS ENVIRONMENTS:
be safe SG O₂ NC
be safe SG CO NC
be safe SG H₂S NC
be safe SG SO₂ NC

3.0 OVERVIEW

be safe SG are portable personal safety devices designed to detect the presence of specific individual gases:

- be safe SG H₂S Hydrogen sulfide (H₂S)
- be safe SG CO Carbon monoxide (CO)
- be safe SG SO₂ Sulfur dioxide (SO₂)
- be safe SG O₂ Oxygen (O₂)

In case an alarm condition is detected, the device alarms the user with audible, visual and vibration signals.

These are single-use devices, which once activated operate for 24 months without charging the internal battery and without any replacement of components.

be safe SG is equipped with a single button, which allows activation of the device, verification of alarm settings and the possibility of performing the Self-test, and through the infrared communication port it communicates with **be safe SG IR-Link** which connected to a PC, after installation of the **be safe SG IR-Link manager** software allows the user to configure some parameters of the device.

Users of the device must understand what is described in this manual. For safety reasons, users must be properly trained in the use of the equipment and appropriate actions in case of an alarm.

4.0 TECHNICAL FEATURES

Power supply:	Lithium battery, 3.6 Vdc, 1.65 A/h
Communication port:	Infrared (with Be Safe SG IR-Link accessory)
Display:	Liquid Crystal Display (LCD)
Operating life:	24 months from first activation (2 minutes of alarms per day)
Alarms: Sound alarm:	95 dB @ 10 cm
Vibration alarm:	Vibrating motor
Visual alarm:	3 Flashing red LEDs
Alarm thresholds:	Minimum and Maximum
Event memory:	Last 30 events
Protection rating:	IP67

Operating conditions

Use:	Indoor and outdoor use.
Temperature:	Be Safe SG O2: - 30 .. 60 °C (- 22 .. 140 °F)
	Be Safe SG CO: - 40 .. 60 °C (- 40 .. 140 °F)
	Be Safe SG H2S: - 40 .. 60 °C (- 40 .. 140 °F)
	Be Safe SG SO2: - 40 .. 60 °C (- 40 .. 140 °F)
Humidity:	5% to 95% RH, non-condensing

Storage conditions

Storage temperature:	Be Safe SG O2: - 30 .. 60 °C (- 22 .. 140 °F)
	Be Safe SG CO: - 40 .. 60 °C (- 40 .. 140 °F)
	Be Safe SG H2S: - 40 .. 60 °C (- 40 .. 140 °F)
	Be Safe SG SO2: - 40 .. 60 °C (- 40 .. 140 °F)
Humidity limit:	5% to 95% RH


4.1 Dimensions



5.0 MEASUREMENT RANGES AND SENSOR ACCURACY

MEASURE	MEASUREMENT RANGE	SENSOR TYPE	RESPONSE TIME T90
O ₂	0 .. 25% Vol.	Electrochemical	<15 s
CO	0 .. 300 ppm	Electrochemical	<30 s
SO ₂	0 .. 100 ppm	Electrochemical	<30 s
H ₂ S	0 .. 50 ppm	Electrochemical	<30 s

6.0 HARDWARE DESCRIPTION

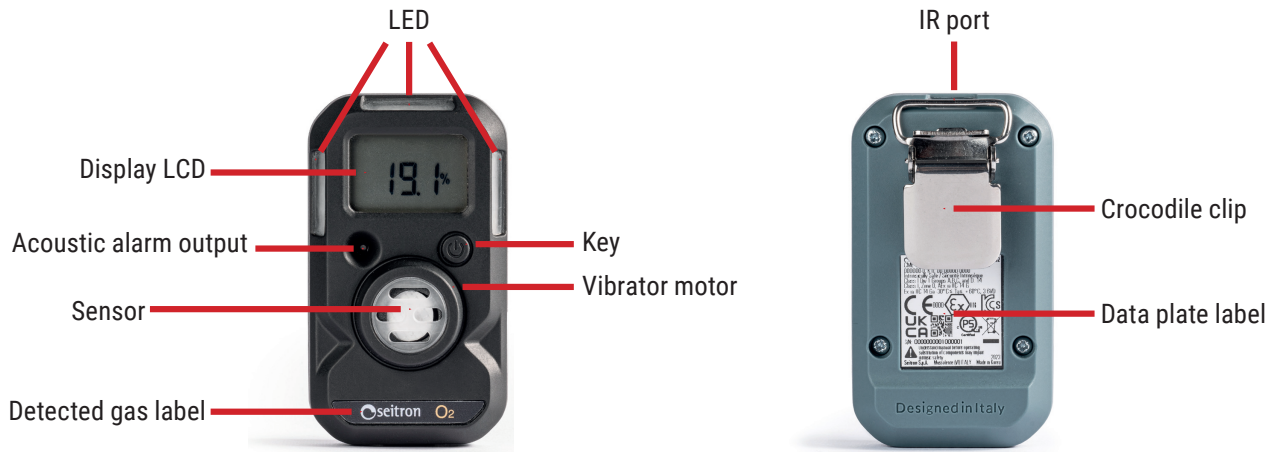

7.0 PRODUCT ACTIVATION

To activate the be safe SG detector, press and hold the button for about 5 seconds.

Upon activation, the detector will perform the following sequences:




- All LCD display icons are displayed for 2 s.
- An audible signal is emitted.
- The LEDs flash.
- A vibration is emitted.

If activation is successful, the display will show the remaining duration (24 months) or the value of the detected gas concentration (depending on the factory setting).

When the product is activated, the user cannot turn it off and it will remain on for the instrument entire life span.

8.0 DISPLAY LCD



MODE	SYMBOL	DESCRIPTION
ALARM	ALARM	Alarm (HIGH / LOW)
	LOW	Alarm LOW
	HIGH	Alarm HIGH
DETECTED GAS	H2S	H2S SENSOR If the writing is flashing, the Self-test execution is required.
	CO	CO SENSOR If the writing is flashing, the Self-test execution is required.
	O2	O2 SENSOR If the writing is flashing, the Self-test execution is required.
	SO2	SO2 SENSOR If the writing is flashing, the Self-test execution is required.
WARNING!		Self-test / Bump Test / Calibration Failed.
	max	A gas concentration above the HIGH alarm threshold has been detected (ALARM HIGH).
		Flashing: bump test is required to be performed.
	CAL	Flashing: performing calibration is required
MEAS. UNIT	%	O2 sensor unit of measurement
	ppm	H2S/CO/SO2 sensors measurement unit
TIME		Remaining life time of the device
	months	Remaining life time in months (over 1 month)
	days	Remaining life time in days (over 24 h)

During normal operation and without gas in the environment, the display, depending on the settings, will show:

- The type of sensor and the sensor reading only
- The type of sensor and the remaining life of the device
- The type of sensor and the remaining life of the device or the gas concentration (if detected)

Note: The display mode can be changed through the PC software "be safe SG IR-Link manager".

Example of display during normal operation of be safe SG:



When gas is present, the display will automatically show the detected gas concentration, in addition to alarm-related displays.



WARNING!

If the display has no icons or is not clearly readable, please contact the Seitron service center.

9.0 OPERATION

9.1 User's Guide



WARNING!

For safety, the detector must be positioned near the user (as close to the head as possible), for example, by attaching it to the top of clothing, taking care not to cover the device. This requirement is crucial to enable the product to effectively detect any gas leaks and to distinguish alarms in case the device detects a concentration of toxic gas and/or oxygen deficiency above the set alarm threshold. Ignoring or failing to perceive a device alarm condition can lead to serious injury or death of the user.

Before using **Be Safe SG**, ensure that the self-test has been performed successfully (confirmation of display functionality, audible alarm, visual alarm, and vibration device). During normal operation, **Be Safe SG** will automatically detect gas and alert the user if an alarm condition is detected (exceeding the alarm threshold).

9.2 Self-test

Before daily use, it is recommended to perform the self-test procedure to verify the activation of the audible alarm, visual alarm, and vibration. You can initiate the self-test procedure if the display shows the sensor type blinking. If the text does not blink, the self-test procedure cannot be performed. The self-test procedure is activated on the device automatically every 20 hours (factory setting) from the last successful self-test.

The interval setting for the self-test execution can be changed via the PC software '**Be Safe SG IR-Link manager**' from 8 hours to 7 days. Alternatively, the self-test procedure can be manually initiated. See Appendix A.

Below is the step-by-step procedure for performing the test:

Note: To ensure safe operation perform self-test before daily use.

1. When it is necessary to perform device self-test, the sensor type icon will flash; press the button present on **be safe SG**.



2. After pressing the button, the following screen will appear, and the device will execute the indicated sequence:
 - The right and left LEDs light up after the audible signal and vibration.
 - All LCD display icons appear.



3. Then, the display shows the low alarm (LOW ALARM) and high alarm (HIGH ALARM) settings. These data can be set using the PC software '**Be Safe SG IR-Link manager**' (see Appendix A):



When the HIGH and LOW alarm settings are displayed, pressing the button will cause the device to perform step 2.


4. After the self-test procedure is finished, the device will notify the user whether the self-test was successful or unsuccessful:

POSITIVE RESULT



The beep sound will be short, then **be safe SG** will return to the normal operation screen.

NEGATIVE RESULT

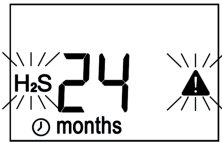

If **be safe SG** fails the self-test, the warning icon “▲” will appear flashing and the icon of the type of the sensor will start flashing. **be safe SG** will then have to repeat the self-test.

9.3 Display main configurations (alarm - user ID)

From the normal operation screen of the device and with no gas in the environment, pressing the button will successively display the High and Low alarm thresholds and if configured the user name associated with the **be safe SG**.

Through the PC software ‘**Be Safe SG IR-Link manager**’ (see Appendix A), you can modify the alarm thresholds (High and Low) and associate/modify a username with the device. The ‘User ID’ consists of a maximum of 6 alphanumeric characters and will be displayed on the display in two screens, each with 3 characters.




9.4 Peak value display

If **be safe SG** is exposed to a gas concentration above the ALARM HIGH threshold, the display will show the “max” icon and the peak (maximum) value detected:



The next screen will sequentially display the date (time, day, month) of when the High alarm occurred and the elapsed time since the peak value was detected.

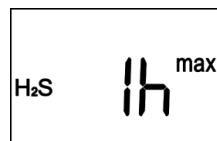

As the last screen, the display shows “CLP” (CLear Peak): pressing the **be safe SG** button while CLP is displayed will clear the stored peak value and the “max” icon will not be displayed.



9.5 Display BUMP TEST EXECUTION

Through **be Safe SG IR-Link manager** (see Appendix A), **be Safe SG** can be configured to perform periodic Bump Tests. If **be Safe SG** requires a Bump Test to be performed, the flashing icon “☐⊙” will be displayed. Additionally, the upper LED + left LED and upper LED + right LED will start flashing alternately at intervals of 32 seconds.

For performing the Bump Test, refer to the ‘Bump Test Execution’ chapter.



9.6 Display CALIBRATION EXECUTION

Through **be Safe SG IR-Link manager** (see Appendix A), **be Safe SG** can be configured for periodic sensor calibration. If **be Safe SG** requires calibration to be performed, the display will alternate between showing “CAL” and the main product screen.

For performing the calibration, refer to the chapter ‘Calibration Execution’.



10.0 GAS ALARM SIGNAL

Below are the factory settings for gas alarms:

Alarm	H ₂ S	CO	SO ₂	O ₂
HIGH	15 ppm	200 ppm	10 ppm	23,5%
LOW	10 ppm	35 ppm	5 ppm	19,5%

It is possible to change the factory settings of gas alarm thresholds using the PC software “**be safe SG IR-Link manager**” (see Appendix A).

To view the alarm settings of **be safe SG**, press the detector button and wait for the screens to scroll.

10.1 LOW alarm status (LOW ALARM)

A gas concentration higher than the LOW ALARM level set has been detected for CO, H₂S, SO₂ sensors, or a lower gas concentration for the O₂ sensor:

- 1) Acoustic alarm (1 time/second)
- 2) LED flashing (1 time/second)
- 3) Vibrating alarm (0.5 time/second)



10.2 HIGH alarm status (HIGH ALARM)

A gas concentration above the set HIGH ALARM level was detected:

- 1) Acoustic alarm (2 times/second)
- 2) LED flashing (2 times/second)
- 3) Vibrating alarm (1 time/second)



11.0 STOP DETECTOR ALARM

If one of the STOP alarms occurs in **be Safe SG**, the detector will generate an audible alarm, flashing LED alarm, and vibrating alarm every 5 seconds.

The alarms will continue until the user presses the button. By pressing the button, **be Safe SG** will turn off the alarm signals, while keeping the error code visible on the display.


11.1 ALARM remaining life under 8 hours

The remaining life of **be safe SG** is less than 8 hours.



11.2 ALARM low battery

After 3 hours of operation since the “EOL” message, the voltage of the internal battery at **be safe SG** is too low or below a certain level.

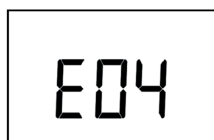

11.3 Self-test failed

The self-test has failed for three consecutive times.

If the self-test fails for three consecutive times, the unit will issue a warning as HIGH ALARM.



12.0 EVENTS LOG

be Safe SG stores the last 30 alarms. The logging system stores alarm events according to FIFO (First In First Out) logic. For example, the 31st event will replace the first event, and the 32nd event will replace the second, and so on.

Alarm events stored on **be Safe SG** can be confirmed and downloaded using the PC software '**be Safe SG IR-Link manager**' (see Appendix A).

The stored information includes:

- Serial number of the detector
- Remaining life of the detector
- Number of self-tests performed
- Number of alarms occurred and cumulative duration
- Event log data:
 - Time elapsed since the last alarm
 - Alarm duration
 - Alarm level(s) in ppm or %.
 - Type of alarms
 - Bump test (yes or no)

13.0 BUMP TEST AND CALIBRATION

This section contains important information on the proper calibration and Bump test performance for **be safe SG**. These procedures are essential to ensure proper operation and accuracy of device readings. Performing Bump Test of all detectors and calibration of **be safe SG O2** should only be performed directly from the instrument, while calibration of toxic gas detectors is carried out from PC via "**be safe SG IR-Link**" interface after installing "**be safe SG IR-Link manager**" software on PC (See Appendix A).

WARNING


- **"be safe SG O2" detectors require periodic calibration to 20.9% Oxygen. Therefore, calibration can be performed in fresh air without the need for a certified test gas cylinder.**
- **Conducting the Bump Test for "be safe SG O2" detectors should be done in fresh air without the aid of a certified test gas cylinder.**
- **Before starting the Calibration/Bump test procedure, make sure that the device is not in an alarm or fault condition.**
- **Check and resolve any alarms or faults before proceeding with calibration or the Bump test.**
- **At altitudes above 2,000 meters, calibration may result in lower readings; calibration performed at high altitudes may lead to less accurate or underestimated readings compared to conditions at lower altitudes. This is important to consider because altitude can influence gas properties and, consequently, the effectiveness of calibration.**

13.1 Tools and necessary equipment

- Certified gas mixtures recommended for performing Bump Test / Calibration:

H2S	25 ppm	complementary gas: Air
CO	100 ppm	complementary gas: Air
SO2	10 ppm	complementary gas: Air
O2	18%	complementary gas: Air (to be used if calibrating via " Be Safe SG IR-Link manager ")
- Use the compatible adapter supplied with the instrument, mounted on the nose of the sensor.
- Use a flowmeter and T-tubing to connect the gas cylinder, flowmeter, and instrument.

13.2 Wiring diagram

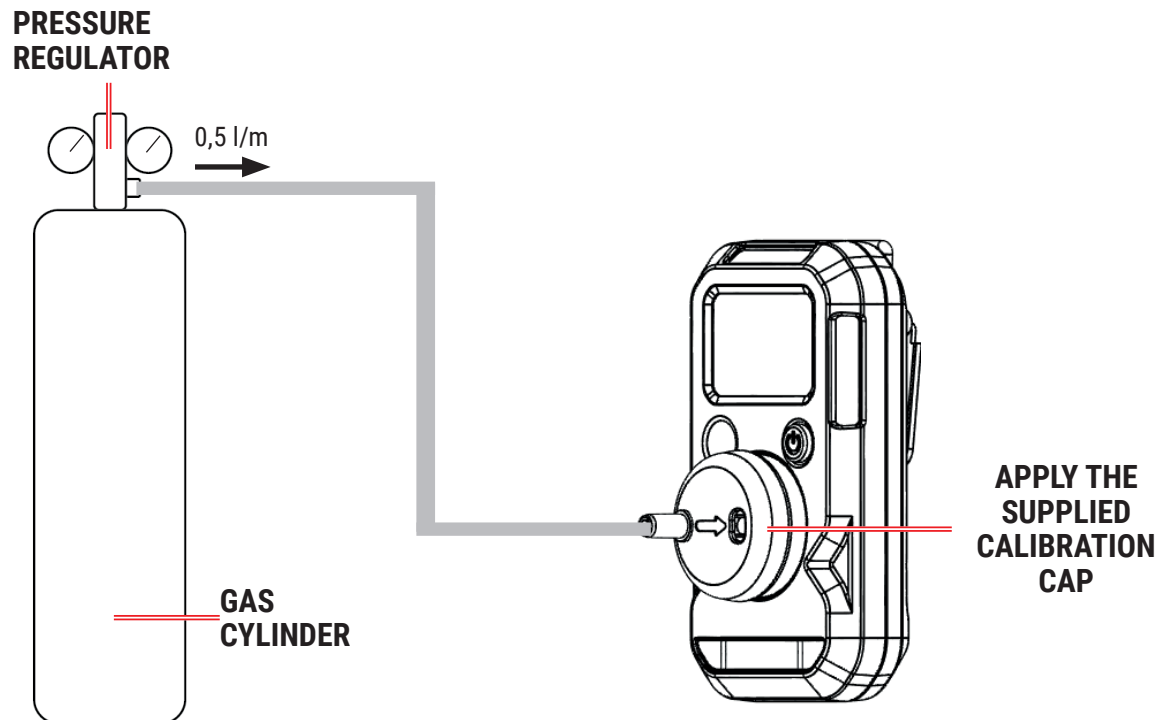


13.3 Performing the Bump Test

Through the PC software 'Be Safe SG IR-Link manager' (see Appendix A), you can adjust the frequency of performing the Bump Test, which can be set from 1 to 365 days. If the interval is set to zero, **be Safe SG** will not prompt for the Bump Test

NOTE: The device comes from the factory set to zero (Bump test not required).

NOTE: Seitron recommends performing the bump test before each use to verify the device's reliability.

PROCEDURE

1. If **be Safe SG** requires the Bump Test to be performed, the flashing icon "" will be displayed on the display. Additionally, the upper LED + left LED and upper LED + right LED will start flashing alternately at intervals of 32 seconds.
2. Connect the adapter and gas cylinder as described in the previous section.
3. **Press the button** to switch to the inspection screen; the display shows the alarm and user ID configuration sequence and finally settles on the "GAS" screen:




4. From the inspection screen, expose the instrument to the relevant gas for 45 seconds.
If the button is pressed without exposing the instrument to the gas for 45 seconds, the bump test will stop. The detector will then continue to indicate the bump test status, prompting the user to repeat the procedure if necessary.
5. The bump test is completed when the detector displays the applied gas concentration on the inspection screen after being exposed to the gas.
Note: during the bump test, it is normal for the instrument to activate the LOW and HIGH alarm thresholds if the detected gas concentration matches the set alarm thresholds.
6. Stop the gas flow and remove the calibration adapter.
7. Place the instrument in fresh air. The alarms will automatically reset as the detected gas concentration decreases. The alarm log will be automatically stored in the detector.

13.4 Performing the calibration of “be safe SG O2”

Through the PC software ‘Be Safe SG IR-Link manager’ (see Appendix A), you can adjust the frequency of performing the calibration, which can be set from 1 to 365 days. If the interval is set to zero, Be Safe SG O2 will not prompt for calibration. The factory default setting for Be Safe SG O2 is to calibrate the detector every 30 days.

PROCEDURE

1. If **be safe SG O2** requires Calibration to be performed “ $\alpha_2 r 0$ ” and gas concentration will be alternately shown on the display.
2. **Press and hold the button for 5 seconds; be safe SG O2** performs calibration and the display shows the following screen with O2 flashing:

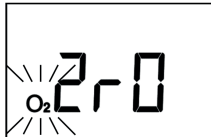

3. **Calibration is successfully completed** when the detector displays the gas concentration with sequential activation of the buzzer, vibration and flashing of the LEDs.

If, on the contrary, the calibration was unsuccessful, the device will go into alarm status by activating the audible alarm and the LEDs will flash. If the calibration fails, contact Seitron service center.

Note: If the sensor calibration procedure is successful but the O2 indicator remains flashing, it means that the self-test must be performed.

14.0 FAULTS

PROBLEM	CAUSE
The detector emits an acoustic signal, the LEDs flashes for 10 times and on the display the signaling icon “▲” appears flashing and the sensor type icon will start flashing.	The self-test outcome is negative. Repeat the self-test.
An E05 STOP alarm has occurred; the detector has generated an audible alarm, flashing LED alarm, and vibrating alarm every 5 seconds. The display shows “E05”	The self-test failed three consecutive times. By pressing the button, Be Safe SG will turn off the alarm signals while keeping the error code visible on the display. In case this notification occurs, please contact Seitron support center for assistance.
An EOL STOP alarm has occurred; the detector has generated an audible alarm, flashing LED alarm, and vibrating alarm every 5 seconds. The display shows “EOL”.	The battery is continuously monitored throughout the entire duration of the detector’s operation. If the remaining life of Be Safe SG is less than 8 hours, the detector has reached the end of its operational life. Please discontinue use and contact Seitron support center for assistance.
An E04 STOP alarm has occurred; the detector has generated an audible alarm, flashing LED alarm, and vibrating alarm every 5 seconds. The display shows “E04”.	After 3 hours of operation since the “EOL” message, the voltage of the internal battery in be Safe SG is too low or below a certain level: the detector has reached the end of its operational life. Please discontinue use and contact Seitron support center for assistance.
The detector restarts shortly after firmware download, and the display shows “E01” or “E02”. “E01” or “E02” can also occur due to firmware or power supply issues.	Press the button to stop the alarm. If this error occurs, please contact Seitron support center for assistance.
After updating the firmware, Be Safe SG restarts, and the display shows “E03”.	Download the firmware again and repeat the firmware update procedure. If the error persists, please contact Seitron support center.

15.0 MAINTENANCE

15.1 Repair

There is no provision for repairing the device.

15.2 Cleaning

Clean the detector with a soft cloth dampened with a neutral, anti-static detergent. Do not use solvents, soaps, or polish products.


APPENDIX A - be safe SG IR-Link & be safe SG IR-Link manager

Be Safe SG IR-Link is an IR device (available separately) that, when connected to the PC via a USB cable, can communicate with the single gas detector **be Safe SG** after installing the “**be Safe SG IR-Link Manager**” software on the PC, which can be downloaded from the website www.seitron.com.

The main operations that can be performed through the PC software “**be Safe SG IR-Link Manager**” include:

- Modifying alarm threshold values;
- Setting the interval for Calibration execution;
- Setting the interval for Bump Test execution;
- Setting the interval for Self-test execution;
- Associating the device with a User ID;
- Display mode selection;
- Firmware update for gas detectors;
- Checking the alarm history.

Overview

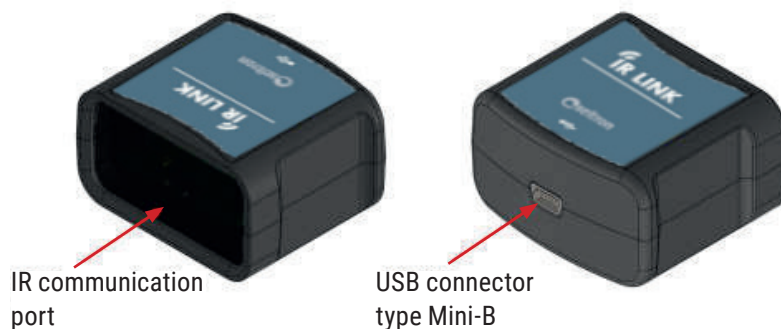

USB Type A / Mini B Cable




Technical features

PC connection:	Via USB type A connector
Communication:	Infrared
	Communication speed: 115200 bps
Connector:	USB Mini-B (5 pins)
Supported operating system:	Windows XP and later
Operating temperature:	10 .. 50 °C (50 .. 122 °F)
Relative humidity:	5 .. 95 % RH (non-condensing)
Dimensions:	46×39×26 mm
Weight:	21 g


Software installation instructions

1. Access the website www.seitron.com and select the DOWNLOAD => Apps and Software section.
2. Scroll down the page until you find the section dedicated to the **"Be Safe SG IR-Link Manager"** software.
3. Click on "Download: version X.XX" where X.XX is the current version of the software.
4. A .zip file download will start. Once the download is complete, click on the button at the top right of your browser to access the "Downloads" folder.

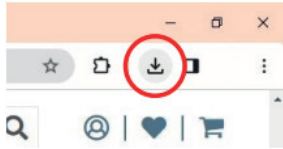


CAUTION: The symbol may vary depending on the browser being used.

- 5) Right-click on the recently downloaded .zip file. Select "Extract All" from the dropdown menu. In the window that opens, select the location where you want to extract the contents of the .zip folder and click "Extract."

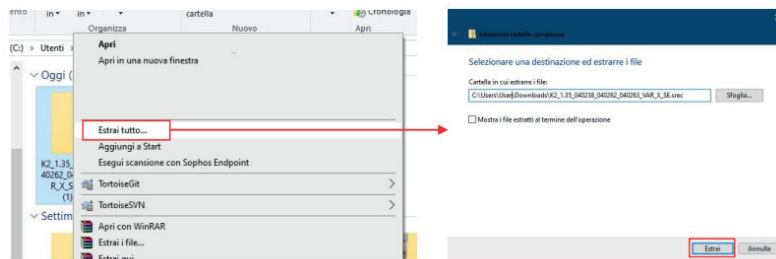

- 6) Double-click on the extracted folder.
- 7) Double-click on the previously downloaded "beSafeSGDockManager.exe" file (step 5). The main screen of the **be Safe SG IR-Link Manager** software will appear.

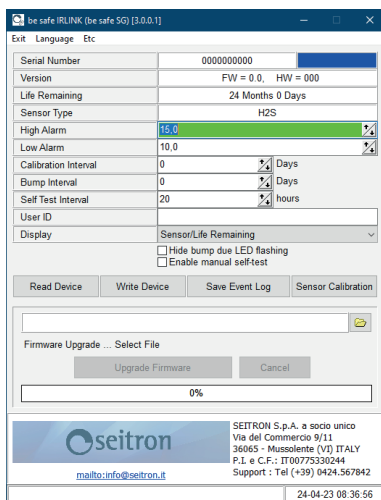

Connect be safe SG

Be Safe SG IR-Link and the single gas detector **be Safe SG** communicate with each other through an IR interface by placing them as shown in the image below. **Be Safe SG IR-Link** can communicate with only one instrument at a time.




From the software screen, click on **"Read Device."**

At the bottom left, the "Read Device Information" bar turns green, with the indication "OK," indicating that the instrument is connected to the PC.

If the bar turns red, the instrument is not connected.


It may happen that the instrument on the first connection does not connect, in this case reposition the instrument near **be safe SG IR-Link** by holding it horizontally, then **click again on "Read Device"**.

After several unsuccessful attempts, contact Seitron support center.

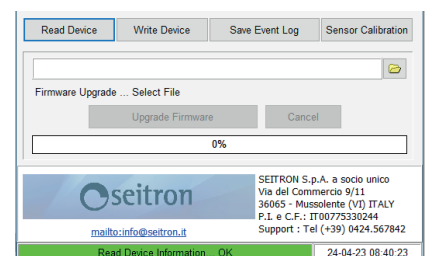

Further information

When the instrument is connected and the reading is successful, the instrument can be configured.

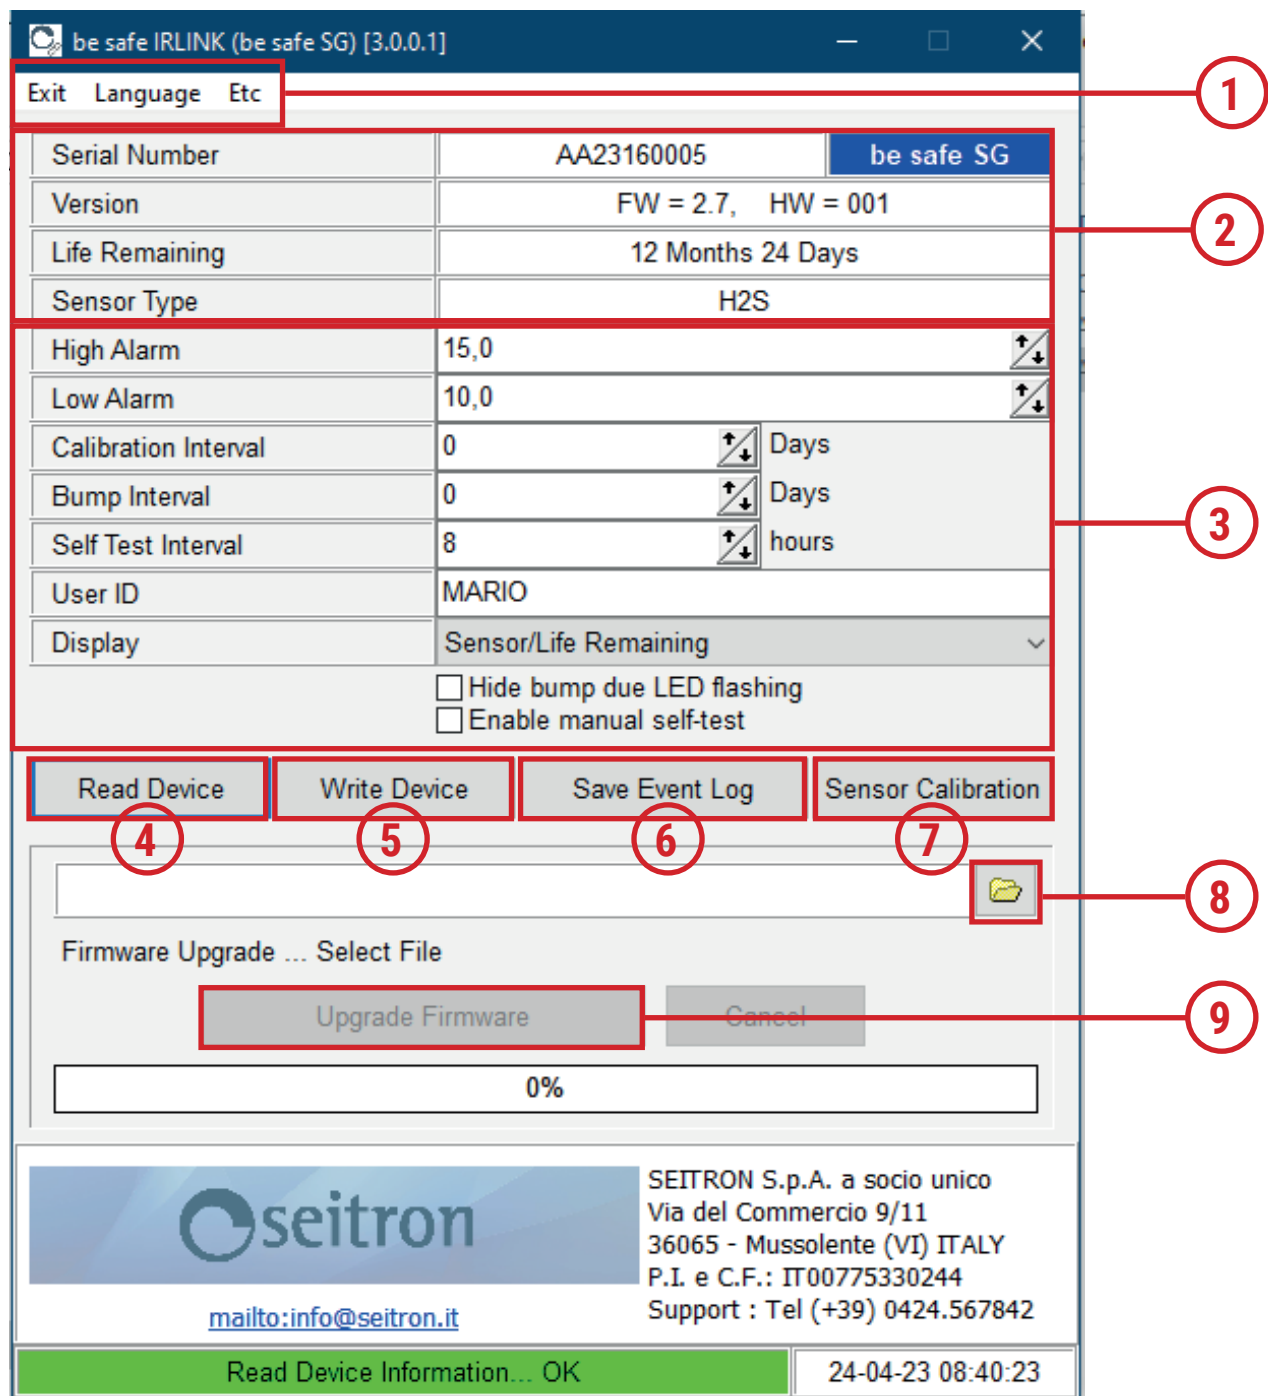

The screenshot shows the configuration window for the be safe SG instrument. The interface includes a menu bar, a data table, a configuration table, and a control panel. Red circles with numbers 1 through 9 point to specific elements:

- 1: Menu bar (Exit, Language, Etc)
- 2: Data table (Serial Number, Version, Life Remaining, Sensor Type)
- 3: Configuration table (High Alarm, Low Alarm, Calibration Interval, Bump Interval, Self Test Interval)
- 4: Read Device button
- 5: Write Device button
- 6: Save Event Log button
- 7: Sensor Calibration button
- 8: File selection icon (yellow folder)
- 9: Upgrade Firmware button

Parameter	Value	Unit
Serial Number	AA23160005	be safe SG
Version	FW = 2.7, HW = 001	
Life Remaining	12 Months 24 Days	
Sensor Type	H2S	
High Alarm	15,0	
Low Alarm	10,0	
Calibration Interval	0	Days
Bump Interval	0	Days
Self Test Interval	8	hours
User ID	MARIO	
Display	Sensor/Life Remaining	

Buttons: Read Device (4), Write Device (5), Save Event Log (6), Sensor Calibration (7)

Firmware Upgrade Section: Upgrade Firmware (9), Cancel

Progress: 0%


Footer: SEITRON S.p.A. a socio unico, Via del Commercio 9/11, 36065 - Mussolente (VI) ITALY, P.I. e C.F.: IT00775330244, Support : Tel (+39) 0424.567842

Status: Read Device Information... OK, 24-04-23 08:40:23

1	"Exit" Button	Closes the App.
	"Language" Button	Set the App language.
2	Information about the connected be Safe SG	Users can view information about the connected device. This section is not editable. Serial number. Firmware version and hardware version of the connected device. Remaining life of the device. Gas type detected by the device.
3	User-configurable data	High Alarm: Configures the gas concentration at the HIGH alarm limit.
		Low Alarm: Configures the gas concentration at the LOW alarm limit.
		Calibration Interval: Specifies how often the device requires calibration (0 to 365 days).
		Bump Test Interval: Specifies how often the device requires a Bump test (0 to 365 days).
		Self-test Interval: Specifies how often the device requires an Self-test (8 to 168 hours).
		User ID: Customized ID for the device. Up to 6 characters.
		Display: Device display mode. Sensor/Remaining Life: When a gas concentration is detected, the sensor reading or the remaining life of the device is displayed. Sensor reading: sensor reading is always displayed. Remaining life: Remaining life is always displayed.
4	"Read Device" button	Hide Bump Test LED flashing: checked, hides the flashing of the LEDs when performing the Bump Test.
		Enable manual self-test: It is activated if the box 'Enable manual self-test' is checked; pressing the button for more than 5 seconds executes the self-test.
4	"Write Device" button	Allows to read device information and settings.
5	"Write Device" button	Transmits the new configuration on the device.
6	Button "Save Event Log"	Reads and exports in .csv format the event logs stored on the device.
7	Pulsante "Calibrazione"	Starts the sensor calibration procedure.
8	Seleziona file	Select the Firmware update file from the PC.
9	Button "Upgrade Firmware" / "Cancel"	Start / Cancel the firmware update.

Language configuration

1. Click on the “language” button.
2. Select one of the available languages.
3. Click on “Font” to set font details.

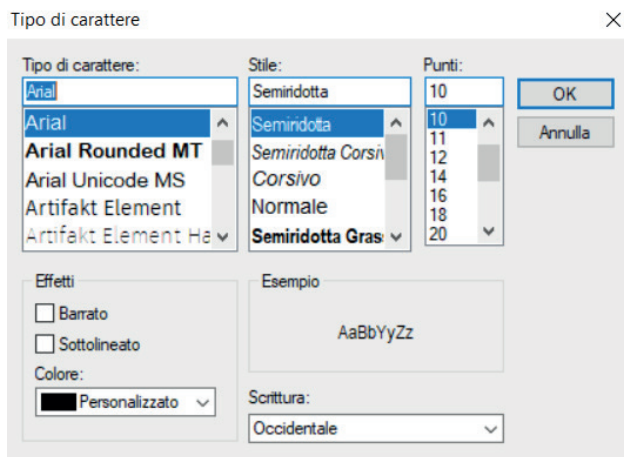

Features

Read device information and settings

- Click on “Read”.

Change device settings

1. After clicking on “Read Device” and reading the information and setting of the device, you can change the settings of the device by clicking on the “↕” and/or “□” icons or directly typing in the value.
2. Click on “Write device” to save the changed settings to the **be safe SG**.

Save event log


1. Click “Save Event Log.”
2. The pop-up to save the .csv file will be displayed. Specify the folder and file name and save the document.

Sensor calibration

Through the **be safe SG IR-Link PC software**, Calibration of **be safe SG** gas detectors can be performed, regardless of whether the instrument requires calibration or not, using certified gas cylinders.

Procedure:

1. Place the device in an environment with fresh air.
2. **Click on the “Sensor Calibration” button** the screen appears through which you can set the gas concentration contained in the certified gas cylinder, which you will use to perform the calibration and start the calibration (example referred to **be safe SG H2S**):

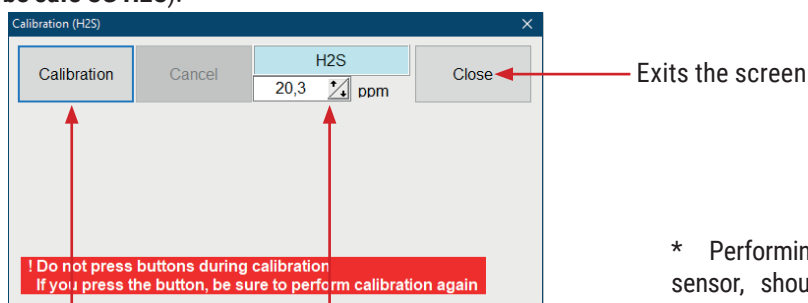


Start sensor calibration

Set the gas concentration*


Exits the screen

* Performing the calibration for the Oxygen sensor, should only be done with a certified gas concentration of 18% that cannot be changed. For other sensors, a different certified gas concentration can be used, within the range allowed by the App.

3. Click on "Calibration" to start calibration.
4. The device will perform the calibration of ZERO.
Details on the progress of calibration, are displayed on the lower left corner of the App.
5. When the "OK" result of the Zero calibration is displayed on the App screen, proceed to the SPAN calibration.

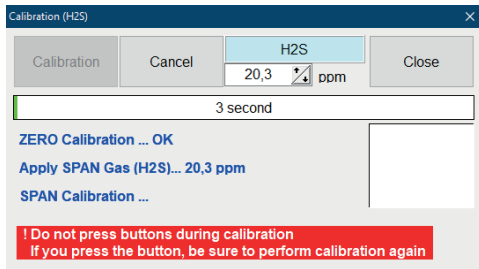

6. Connect the adapter and the certified gas cylinder. See the details in sections "11.1 Tools and necessary equipment" and "11.2 Wiring diagram".
7. Supply gas to the instrument. The instrument's display will show the message "C 90" ("C 20" for the O2 sensor) indicating the duration in seconds for which the instrument should be exposed to the calibration gas. The countdown starts when the sensor begins to detect the calibration gas.
8. After 90 seconds (20 seconds for the O2 sensor), the calibration will be completed.
To stop the calibration, click on "Cancel".
If you start the SPAN calibration without exposing the instrument to the gas, the calibration will stop. The detector will continue to indicate the Calibration status, so the user can repeat the procedure.
9. Wait for the calibration result:

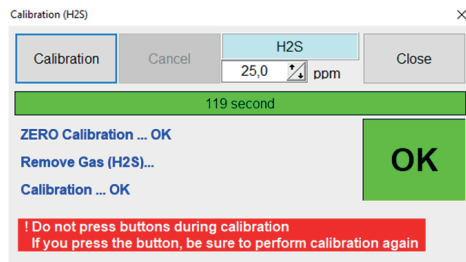

Result:

- OK: Positive result indicated by the green square "■".
- Fail: Negative result indicated by the red square "■" containing the error that caused the calibration to fail.

If the calibration fails, the device's display will show "CAL" and the flashing "⚠" icon. Repeat the calibration, and if it fails again, contact Seitron support center.


6. Stop the gas flow and remove the calibration adapter.

Firmware Update

The manufacturer periodically updates the firmware to correct or improve the instrument's performance or to add additional features.

The update can be performed by the user following the simple instructions below:

1. Connect to the website www.seitron.com and download the firmware file available in the "Download - Firmware" section; this file is compressed with a .zip extension.
2. Open the compressed folder with a .zip extension and extract the file.
3. Click on the "📁" button to select the firmware update file previously downloaded from the website.
4. Click on the "Upgrade Firmware" button.
5. The progress of the firmware update is displayed in the progress bar. The firmware update will take from 5 to 10 seconds.

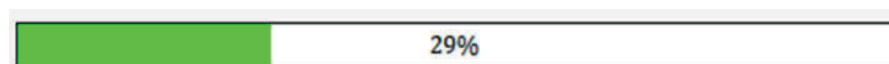

6. At the end of the update, the device will be restored.

TROUBLESHOOTING

SYMPTOM	
More than one be safe SG IR-Link connected to the PC is detected.	Make sure that only one be safe SG IR-Link is connected to the PC.
be safe SG IR-Link is not installed on the PC.	Delete the existing driver or program and reinstall it. If this symptom recurs after reinstallation, contact the Seitron service center.
The USB communication port of the PC to which be safe SG IR-Link is connected is not installed.	Make sure that be safe SG IR-Link is connected to the PC. Delete the existing driver or program and reinstall it. If this symptom recurs after reinstallation, contact Seitron service center.
be safe SG IR-Link is not detected by the PC.	Make sure that be safe SG IR-Link is connected to the PC. Make sure that the smooth surface of be safe SG IR-Link and the top of the be safe SG instrument are facing each other at a distance of about 5 cm.
Operating system not supported.	The operating system of the PC in use is not supported by be safe SG IR-Link or its driver. The operating system supported by be safe SG IR-Link is Windows XP or later.
An error occurred on be safe SG IR-Link .	Delete the existing driver or program and reinstall it. If this symptom recurs after reinstallation, contact the Seitron service center.
Connection error of be safe SG IR-Link .	Make sure that be safe SG IR-Link is connected to the PC. Make sure that the smooth surface of be safe SG IR-Link and the top of the be safe SG instrument are facing each other at a distance of about 5 cm.
Communication error	Make sure that the smooth surface of be safe SG IR-Link and the top of the be safe SG instrument face each other at a distance of about 5 cm.

Seitron S.p.A. a socio unico
Via del Commercio, 9/11 - 36065 - MUSSOLENTE (VI) ITALY
Tel. 0424.567842 - info@seitron.it - www.seitron.com