


PC software for Höntzsch hand-held units for configuration, readout and processing of measured data

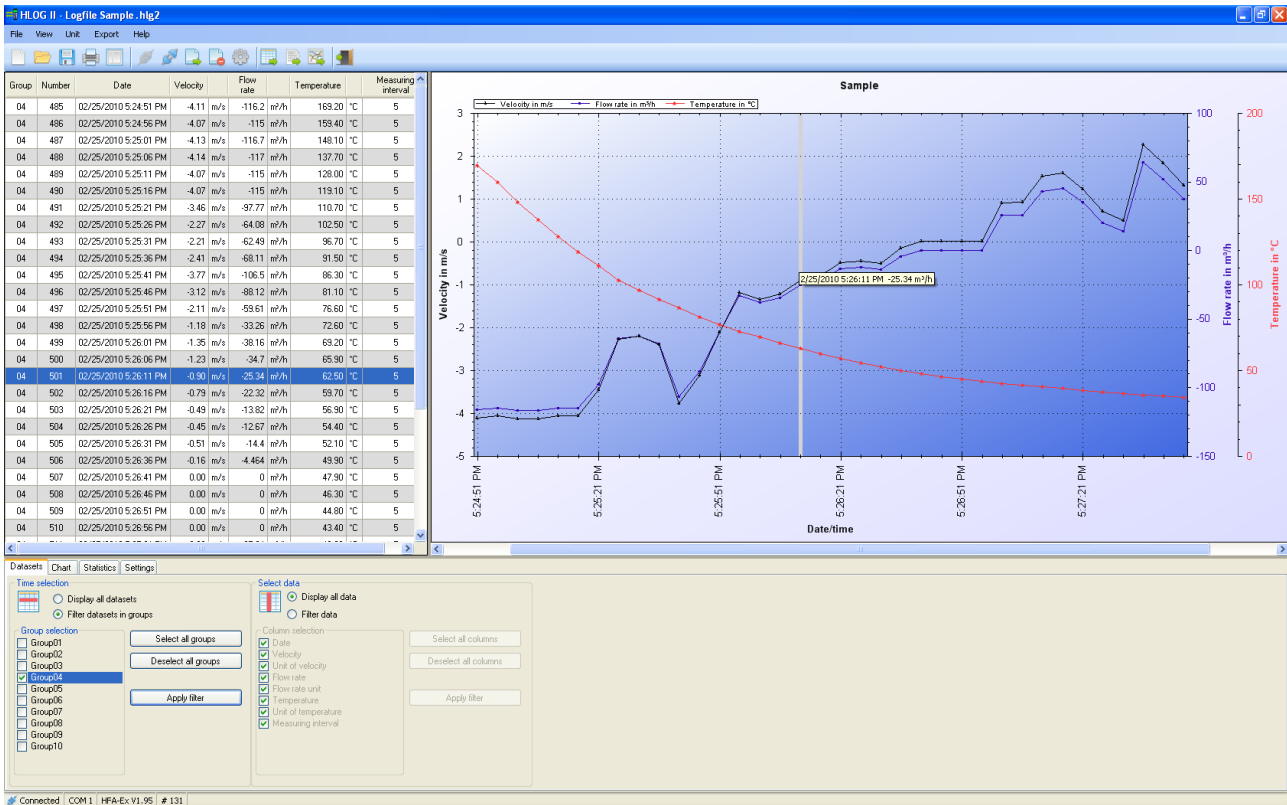

Datalogger

HLOG II allows readout of the data saved to the handheld unit.

Display

The transferred data can be displayed numerically in a spreadsheet which can be formatted and also as an interactive line chart.

Saving data

All data can be permanently archived under an individual identifier.

Configuration

With the HLOG II all settings can be readout, changed and saved. Individual linearising of characteristics for reducing measurement uncertainty is easily done on the PC.

Data exchange

XLS or CSV files can be generated to export numerical data. Charts are exported as JPG file.

Print-out

Spreadsheets, charts, settings and pairs of values can be printed. Fit the data to size if necessary before printing.

Statistics functions

- number of rows (groups)
- number of data sets
- total time of all measurements
- min. value
- max. value
- average

Compatibility

Data exchange is possible with the following Höntzsch units:

- flowtherm Ex
- flowtherm NT
- HTA, HTA-Ex
- HFA, HFA-Ex
- HVA

Software version 1.9 upwards is necessary for full use of the HLOG II functions in Höntzsch HxA units. A software update can be carried out by Höntzsch.

PC / handheld unit connection

The handheld units flowtherm Ex and flowtherm NT are equipped with a USB interface with which they can be connected directly to a PC. HFA, HFA-Ex, HTA, HTA-Ex and HVA have an RS232 interface. Here a special adapter cable is necessary for connecting to a PC. A Höntzsch converter is available for converting an RS232 to a USB interface.

System requirements

- Windows 98 (SP2), later version recommended
- at least Pentium III
- 256 MB RAM, 512 MB recommended
- approx. 100 MB free memory on the hard drive

Menu navigation

German, English, Japanese

Prompts

User assistance via the help function. Retrieval of information such as Data Sheets and Operating Instructions.

Order information / Accessories

	Art. No.
Software set HLOG II (flowtherm Ex, flowtherm NT) configuration of handheld unit and displaying data on a PC, data export as XLS and CSV file, chart export as JPG file, incl. 1.8 m USB cable and carrying case	A000/522
Software set HLOG II (HTA-Ex, HFA, HFA-Ex, HVA) configuration of handheld unit and displaying data on a PC, data export as XLS and CSV file, chart export as JPG file, incl. 1.5 m RS-232 connection cable and carrying case, connector 680-6 / D-SUB 9-pin	A000/520
Software set HLOG II (HTA) configuration of handheld unit and displaying data on a PC, data export as XLS and CSV file, chart export as JPG file, incl. 1.5 m RS-232 connection cable case, connector 680-8 / D-SUB 9-pin	A000/521
Software update HLOG to HLOG II	A000/525
Interface converter USB/RS232	A010/100

Höntzsch GmbH

Gottlieb-Daimler-Straße 37
D-71334 Waiblingen (Hegnach)
Tel: +49 7151 / 17 16-0
Fax: +49 7151 / 5 84 02
E-Mail: info@hoentzsch.com

จัดจำหน่ายโดย

บริษัท โอเมก้า เมชเชอริง อินสตรูเมนต์ จำกัด
50/23 หมู่ 3 ต.มหาสวัสดิ์ อ.บางกรวย จ.นนทบุรี 11130
Tel : 02 105 4676
Fax : 02 903 0080 ext. 6867
Email : info@omi.co.th

